

Precision Valveless Plunger Pump



Ultra-High Precision Valveless Plunger Pump

The Iwaki Hi-Cera pump is a compact metering pump that employs a fine ceramic plunger. The unique valveless construction eliminates problems caused by clogging and jamming that commonly occur in conventional metering pumps. The precision micron-machining on the main ceramic parts ensures a high degree of discharge accuracy. The versatility of the Iwaki Hi-Cera pump makes it ideal for micro-chemical feeding as well as high-viscosity liquid feeding.



Ultra-High Precision Dosing of $\pm 0.5\%$ (Reference)

Capable of ultra-high precision dosing at a micro discharge capacity. Simple adjustment of the discharge capacity by changing the angle of the pump head. (Other than V-07)



Higher Corrosion Resistance-Perfect for Handling a Variety of Liquids

Such as ceramics and PTFE resins are used on the main wetted surface, lending greater resistance when pumping acid, alkaline, organic solvents, and other liquids.



Max. 20,000 mPa·s High Viscous Liquid Transfer

The unique valveless structure enables the smooth metering transfer of high viscous liquid at a maximum of 20,000 mPa·s.

- The handling of viscous liquid is limited to the motor type with a speed reducer.
- The transfer of viscous liquid requires verification with actual liquid.



Compact Design-Ideal for Built-in Applications

The compact and light, making them ideal for built-in applications. The reversible motor direction allows you to reverse the flow without needing to change the piping.



Discharge into a Vacuum and Suction From High Pressure Sources

Because there are no suction/discharge valves, the pump is able to discharge directly into a vacuum (negative pressure) without the need for electromagnetic valves. Maintains a constant flow even if the suction/discharge pressure fluctuates.

- Accuracy of injection into vacuum may vary depending on piping conditions.




Original Structure-Gas Lock Free

This pump enables air to be automatically discharged from the outlet, thereby preventing problems caused by gas lock.


- Depending on the installation conditions or the liquid being handled, there are times gas cannot be discharged smoothly. Contact us for more details.

Ultra-High Precision Mechanism

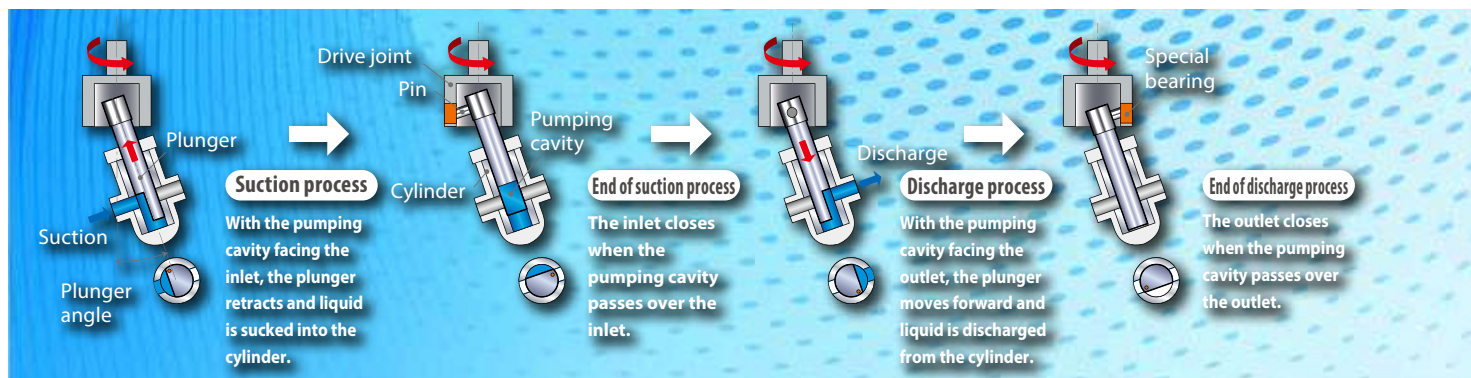

The plunger is connected to the drive joint via a special bearing and pin. When the drive joint rotates, the plunger rotates and moves up and down inside the cylinder. The plunger angle determines how far down the cylinder the plunger moves while the driving joint rotates. This unique structure eliminates the need for the valve system normally employed in other pumps.

Performance Graph

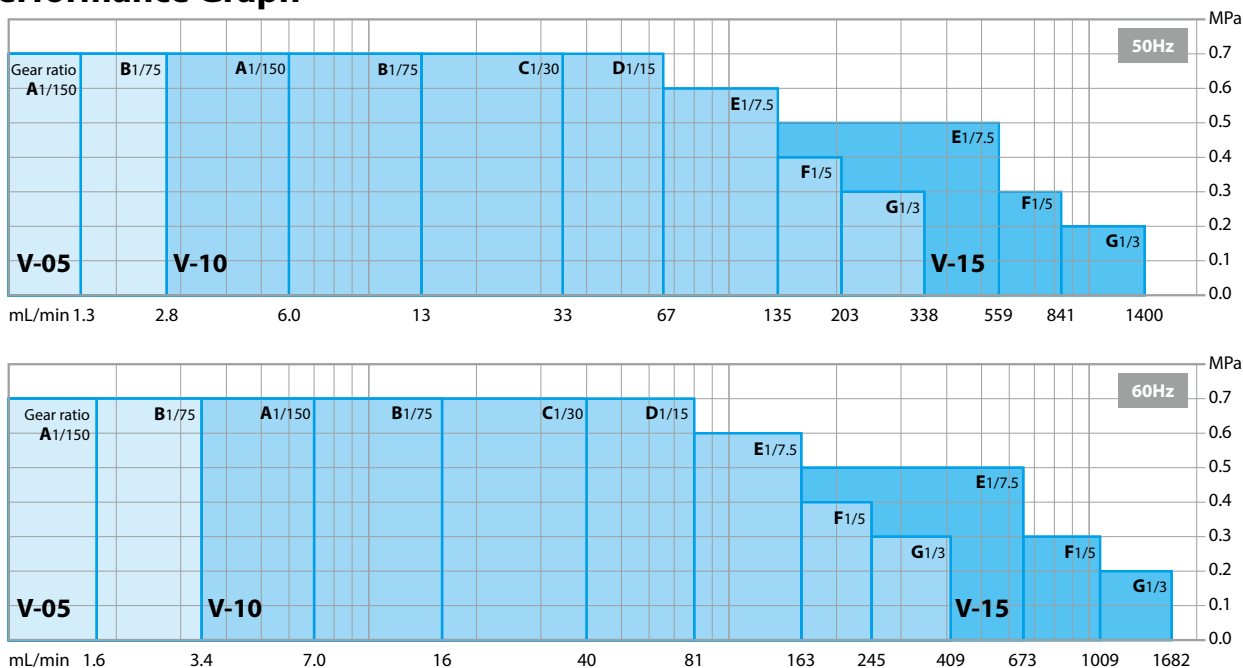

Applications

Secondary cell

Filling and pumping the electrolyte solutions of a lithium cell
Injection of gel-like liquid at a constant rate

Cleaning equipment

Injection of detergent/rinsing chemical

Paper manufacturing

Injection of paper strength additives at a constant rate
Injection of dye at a constant rate
Injection of slime control agent


Capacitor

Injection of phosphoric acid liquid


Liquid waste treatment facility

Injection of polymer flocculants/slaked limes


Cleaning

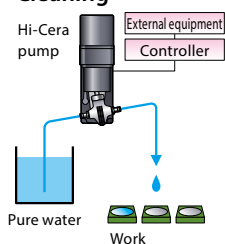


Marking

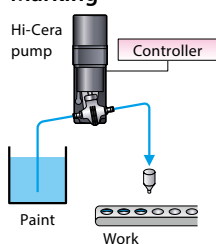

Sampling

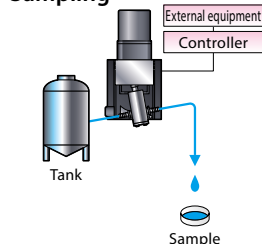

Electrolyte filling

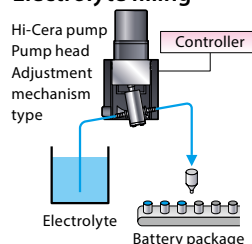

V-05



V-10



V-15

Max. discharge capacity : 2.8/3.4 mL/min
Max. discharge pressure : 0.7 MPa
(50/60Hz)

Max. discharge capacity : 338/409 mL/min
Max. discharge pressure : 0.7 MPa
(50/60Hz)

Max. discharge capacity : 1,400/1,682 mL/min
Max. discharge pressure : 0.5 MPa
(50/60Hz)

Materials

Model	V-05	V-10	V-15
Pump head	SCS14		SUS304
Plunger	SiC	SiC Al ₂ O ₃	SiC Al ₂ O ₃
Cylinder	SiC	SiC Al ₂ O ₃	SiC Al ₂ O ₃
Head seal	PTFE		
Back sheet	PTFE		
Tube joint	SUS316		
Joint seal	PTFE		
Lip seal	PTFE		

Plunger

The plunger is processed using micron order high-precision technology, leading to a higher degree of discharge precision. It is made of SiC or alumina ceramic (Al₂O₃).



Cylinder


Like the plunger, the cylinder is also processed using high-precision technology.



Joint seal

Tube joint

We offer a standard stainless steel hose joint (SUS316) and a stainless steel female adapter (SUS316) that can be connected to commercial tube fitting.

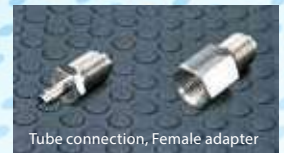

Pump head


Head seal

Back sheet


Lip seal

Lock lever

Discharge adjustment mechanism



Stroke 0
Discharge 0

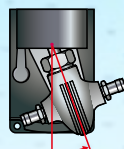

Stroke Max
Discharge Max

Identification

V - 05 S L P 1 A 1 - X

1 2 3 4 5 6 7 8

Standard combination	1 Plunger diameter	2 Material (Plunger/Cylinder material)	3 Pump head material	4 Flushing port
05SL	05: Ø5mm	S: SiC/SiC	L: SCS14 Stainless steel casing	_ : Unavailable
05SLP				P : Available
10AL	10: Ø10mm	A: Al ₂ O ₃ /Al ₂ O ₃	L: SCS14 Stainless steel casing	_ : Unavailable
10ALP				P : Available
10SL		S: SiC/SiC		_ : Unavailable
10SLP				P : Available
15AS	15: Ø15mm	A: Al ₂ O ₃ /Al ₂ O ₃	S: SUS304 Machined	_ : Unavailable
15ASP				P : Available
15SS		S: SiC/SiC		_ : Unavailable
15SSP				P : Available

The table above lists the plunger diameter, plunger/cylinder materials, and pump head materials. It also indicates whether a flushing port is equipped.

5 Joint.....	Adaptation pump
1: Ø6 SUS hose	V-05, V-10 Gear ratio 1/150 - 1/15
2: Ø10 SUS hose.....	V-10 Gear ratio 1/7.5 - 1/3
3: Ø13 SUS hose.....	V-15
4: Rc1/4 SUS female adapter.....	V-05, V-10
5: Rc3/8 SUS female adapter.....	V-15
6 Gear ratio.....	Adaptation pump
A: 1/150.....	V-05, V-10
B: 1/75.....	V-05, V-10
C: 1/30.....	V-10
D: 1/15.....	V-10
E: 1/7.5.....	V-10, V-15
F: 1/5.....	V-10, V-15
G: 1/3.....	V-10, V-15
7 Power voltage	
1: AC100V single phase	
3: AC200V three phase	
8 Special specifications	
X: Special specifications	Contact us for details.

Specifications (50/60Hz)

Model	Gear ratio	Rotation speed rpm ^{Note2}	Max. discharge capacity mL/min	Max. discharge pressure MPa	Tube joint mm ^{Note3}	Standard motor ^{Note4}	Mass kg
V-05SL1A1	1/150	9/11	1.3/1.6	0.7	Ø6 SUS316 made hose joint type	Induction motor AC100V single phase 15W AC200V three phase 25W	2.3(100V) 3.0(200V)
V-05SL1B1	1/75	19/23	2.8/3.4		Ø6 SUS316 made hose joint type		
V-10□L1A1 ^{Note1}	1/150	9/11	6.0/7.0				
V-10□L1B1 ^{Note1}	1/75	19/23	13/16				
V-10□L1C1 ^{Note1}	1/30	48/58	33/40				
V-10□L1D1 ^{Note1}	1/15	96/116	67/81				
V-10□L2E1 ^{Note1}	1/7.5	193/232	135/162	0.6	Ø10 SUS316 made hose joint type	Induction motor AC100V single phase 25W AC200V three phase 25W	3.0
V-10□L2F1 ^{Note1}	1/5	290/348	203/245	0.4			
V-10□L2G1 ^{Note1}	1/3	483/580	338/409	0.3			
V-15□S3E1 ^{Note1}	1/7.5	193/232	559/673	0.5	Ø13 SUS316 made hose joint type	Induction motor AC100V single phase 40W AC200V three phase 40W	8.0
V-15□S3F1 ^{Note1}	1/5	290/348	841/1,009	0.3			
V-15□S3G1 ^{Note1}	1/3	483/580	1,400/1,682	0.2			

Note1 : The model code is entered in the box (A: Al₂O₃, S: SiC).

Note2 : The number of revolutions in the table is when the pump load is small, and may decrease as the load increases.

Note3 : Stainless steel (SUS) female adapters as well as a standard tube joint can be used. (V-05, V-10 : Rc1/4, V-15 : Rc3/8)

Note4 : Other motors can be used to accommodate non-standard orders. Contact us for details.

The fitting type and motor power supply can be selected. Please refer to the identification for details.


The performance values in the table represent the values for when clear water is pumped at an ambient temperature.

Discharge capacity per revolution: approx. 0.15 mL/rev for V-05 (swing angle of 18 degrees), approx. 0.70 mL/rev for V-10, approx. 2.90 mL/rev for V-15 (swing angle of 20 degrees)

The suction capacity of the pump is self-priming height of 4 m or more at a suction pressure of -0.04 MPa or less. Note that suction ability varies depending on the liquid that is used.

Be sure to clean the inside of the pump when transferring crystalline liquid or liquid that easily sticks. We also recommend using a flushing port.

AC motor

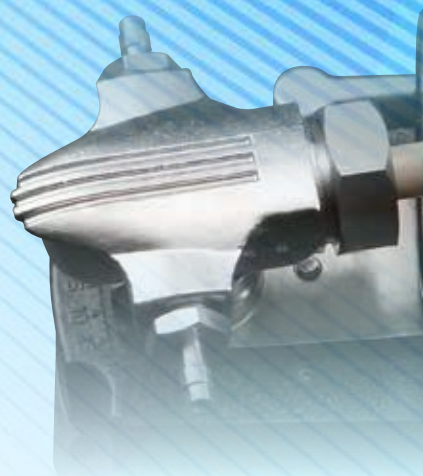

Special Specification Examples

Specifications for special motors

Special specifications are required for non-standard motors. Contact us for details about these specifications.

Stepping motor type

Allows for high precision injection at the ultra-precision level.



Speed control motor type (Equipped with a controller)


The variable volume controller located at the top of the motor makes it easy to control the number of the revolutions.



Secondary/lithium cell

Pump equipped with a pump head adjustment mechanism

This type has an adjustable knob used to change the swing angle of the pump head, allowing for the fine adjustment of the stroke length.

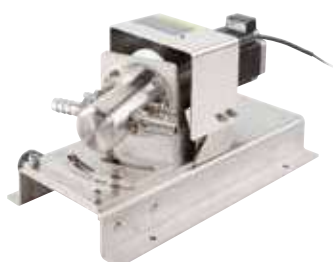

Dialyzer

Pump for artificial dialysis



V-15 for drug solution/dialysate



V-10 for drainage/dialysate

This type consists of a PVDF pump head and 24 VDC stepping motor. It is mounted on an artificial dialyzer for use as a ultrafiltration pump or dialysate pump.

Compact and Ideal for Device Installation

V-05/07 Series

The compact and lightweight V-05/07 series is a compact plunger pump that is ideal for incorporating into equipment. Since it is driven by a DC motor, highly accurate discharge rate control is possible. It has a variable discharge rate function and a flushing port can be selected, so it is possible to inject chemicals cleanly. Since there are a wide variety of fittings, it can be incorporated into various devices.

Variable discharge volume

The discharge amount per rotation can be selected by adjusting the swing angle of the pump head. (Select when ordering) See the specifications on page 6 for details.

Note : V-07AF4 is not included.

Flushing port

The cleaning/flush port reduces seizing of the plunger. The plunger surface is kept clean at all times, allowing it to operate freely whenever needed.

Note : V-07AF4 is not included.

High torque motor

A high-torque hybrid stepping motor is used. Trouble such as plunger lock is solved. (V-07 only)

Rotation sensor

With the rotation sensor equipped as standard, the pump quickly detects errors and easily monitors discharge rates.

V-07AF4

Fuel Cell-Only Pump



Application : Fixed-quantity injection of fuel-cell reformed water

Long life design, Low power consumption, lightweight

V-07AF4 is a long-life design with a design life of 95,000 hours. (Conventional type "V-07AF3": 90,000 hours)

Features a lightweight design utilizing an aluminum die cast frame, and includes a lock-type connector on the motor and sensor.

V-05ZF(P)66-P V-07AEP06-P V-07AF(P)66-P



V-07AF66-P01

High precision metering pump optimized for immunoassay analyzers

Application : Injection of reagent, cleaning solution, buffer solution, saline solution, etc.

High corrosion resistance

PVDF or ECTFE is used for the pump head material. Supports the transfer of strong alkaline.

V-07AFP06-P




High precision metering pump optimized for dialysis machines

Application : Delivery of A and B dialysates and ultrafiltration

Hot water washable

Can be cleaned with water as hot as 95°C.

DC motor

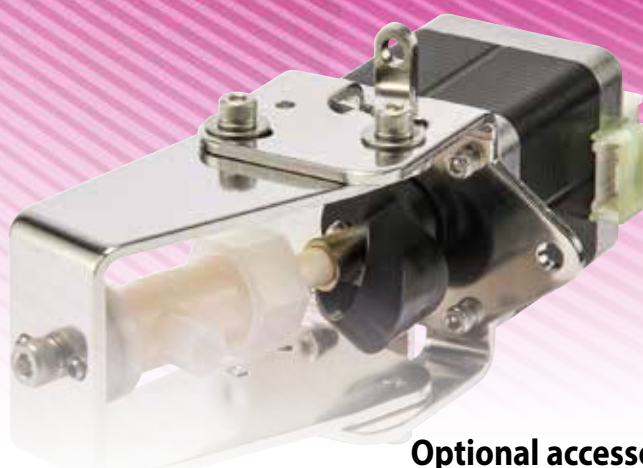


Materials

	Pump head Cylinder Plunger	Pump head Cylinder Plunger	Pump head Cylinder Plunger
Model	V-05ZFP	V-07AEP	V-07AFP
Pump head	PVDF	ECTFE	PVDF
Plunger	ZrO ₂	Al ₂ O ₃	Al ₂ O ₃
Cylinder	Al ₂ O ₃	Al ₂ O ₃	Al ₂ O ₃

Optional accessory

Conversion joints for
V-07AEP06-P

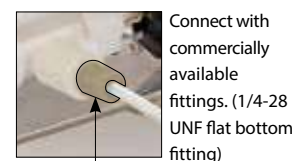

Connect with commercially available fittings. (1/4-28 UNF flat bottom fitting)

Identification

V - 07 A E P 0 6 - P 01

1 Plunger diameter 05: Ø5mm 07: Ø7mm	2 Material (Plunger/Cylinder material) A: Al ₂ O ₃ /Al ₂ O ₃ Z: ZrO ₂ /Al ₂ O ₃	3 Pump head material E: ECTFE F: PVDF	4 Flushing port _: Unavailable P: Available	5 Joint.....Adaptation pump 0: Male thread/Tube.....V-07AEP, V-07AFP 6: Female thread.....V-05ZEP/ZE, V-07AFP/AF	6 Volume/shot 01: 0.1mL/shot 02: 0.2mL/shot 03: 0.3mL/shot
---	---	--	--	---	---

Specification

Applications	Model	Joint	Volume/shot mL	Flow range mL/min	Rotation speed rpm	Repeatability	Max. discharge pressure kPa	Mass g
Fuel-cell	V-07AF4	Quick fastener (P7)	0.1	1 - 20	10 - 200	±3% or below ^{Note2}	40	About 480
Immunoassay analyzers	V-05ZF(P)66-P	Female thread (1/4-28 UNF)	0.1	0.5 - 30	10 - 300	±1.5% or below ^{Note3}	150	About 820
	V-07AF(P)66-P01	Female thread (1/4-28 UNF)	0.1	0.5 - 30	5 - 300	±1.5% or below ^{Note3}	150	About 700
	V-07AF(P)66-P02		0.2	1 - 60				
	V-07AF(P)66-P03		0.3	1.5 - 90				
	V-07AEP06-P01	Male thread ^{Note1} (Dedicated joint)	0.1	0.5 - 30	10 - 300	±1.5% or below ^{Note3}	150	About 700
	V-07AEP06-P02		0.2	1 - 60				
	V-07AEP06-P03		0.3	1.5 - 90				
Dialysis machines	V-07AFP06-P01	Tube (Ø5.5)	0.1	0.5 - 30	5 - 300	±1% or below ^{Note3}	200	About 700
	V-07AFP06-P02		0.2	1 - 60				

• Liquid temperature Other than V-07AFP06-P : 0 - 60°C (Non condensing) V-07AFP06-P : 10 - 40°C (Max flushing temperature is 95°C for 30 min at a maximum.)

• Ambient temperature V-07AF4 : 0 - 60°C V-05ZF(P)66-P, V-07AEP06-P, V-07AF(P)66-P : 0 - 40°C V-07AFP06-P : 0 - 50°C

• Motor V-05 : 2-phase unipolar stepping motor V-07 : Two-phase bipolar stepper motor

• Power voltage : DC24V


Note1 : Use the optional conversion joint when using the standard joint.

Note2 : Based on the clockwise operation when viewed from the front of the pump, at 200min⁻¹ with opened suction/discharge lines.

Note3 : Based on the counterclockwise operation when viewed from the front of the pump, at 100min⁻¹ with opened suction/discharge lines.

Dimensions in mm

AC motor

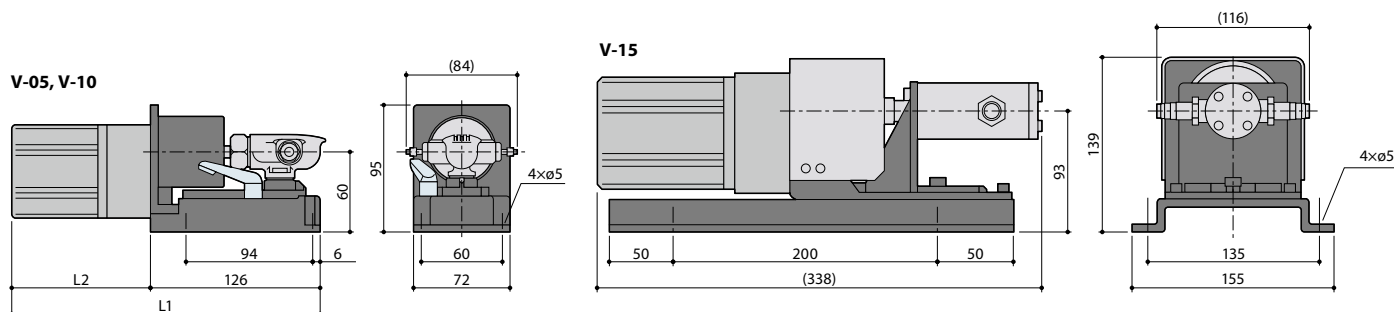

V-05, 10 (15W motor type)


Gear ratio	L1	L2
1/15	(238)	(112)
1/30, 1/75, 1/150	(248)	(122)

V-05, 10 (25W motor type)


Gear ratio	L1	L2
1/3	(247)	(121)
1/5, 1/7.5	(258)	(132)

DC motor


V-07AF4

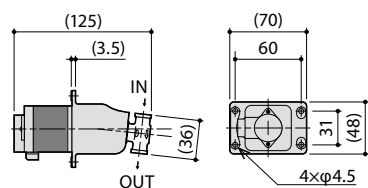


V-05ZF(P)66-P

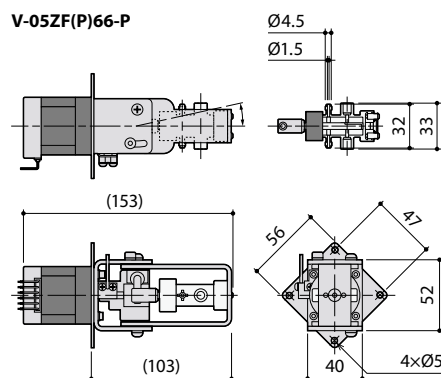

**V-07AEP06-P
V-07AF(P)66-P**

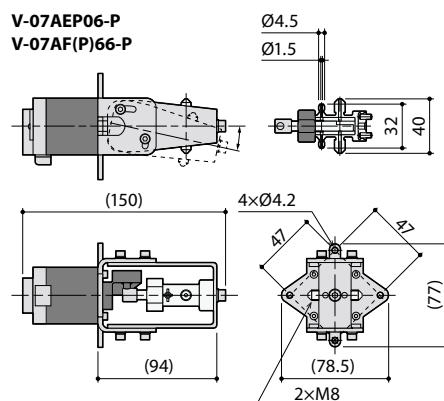

V-07AFP06-P

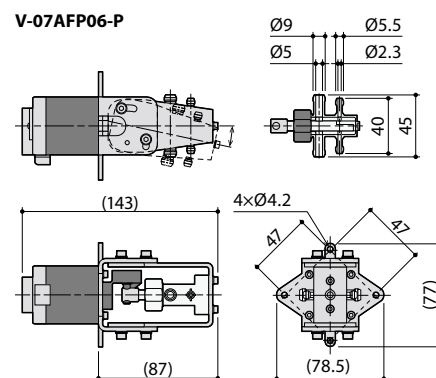

IWAKI CO., LTD. 6-6 Kanda-Sudacho 2-chome Chiyoda-ku Tokyo 101-8558 Japan TEL : (81)3 3254 2935 FAX : 3 3252 8892

IWAKI has global net work.
Please find your distributor location at

www.iwakipumps.jp

European Headquarter
Germany
The Netherlands (Netherlands Branch)
Italy (Italy Branch)
Spain (Spain Branch)
Poland (East Europe Branch)
Denmark
Finland
Norway
Sweden
Belgium
France

IWAKI Europe GmbH
IWAKI Europe GmbH
IWAKI Europe GmbH
IWAKI Europe GmbH
IWAKI Europe GmbH
IWAKI Nordic A/S
IWAKI Suomi Oy
IWAKI Norge AS
IWAKI Sverige AB
IWAKI Belgium N.V.
IWAKI France S.A.

TEL: (49)2154 9254 0
TEL: (49)2154 9254 50
TEL: (31)74 2420011
TEL: (39)0445 561219
TEL: (34)934 741 638
TEL: (48)12 347 0755
TEL: (45)48 242345
TEL: (358)10 201 0490
TEL: (47)23 38 49 00
TEL: (46)8 511 72900
TEL: (32)13 670200
TEL: (33)1 69 63 37 70

FAX: (49)2154 9254 48
FAX: (49)2154 9254 55
FAX: (49)2154 9254 48
FAX: (39)0445 569088
FAX: (34)934 741 638
FAX: (48)12 347 0900
FAX: (32)13 672030
FAX: (33)1 64 49 92 73

U.S.A.
Brazil
China (Shanghai)
China (Hong Kong)
China (Guangzhou)
China (Shenzhen)
Singapore
Indonesia (Indonesia Office)
Malaysia
Korea
Taiwan
Thailand
Australia

IWAKI America Inc.
IWAKI Do Brasil Comercio De Bombas Hidraulicas LTDA.
IWAKI Pumps (Shanghai) Co., Ltd.
IWAKI Pumps Co., Ltd.
GFIZ IWAKI Engineering & Trading Co., Ltd.
IWAKI Pumps (Shenzhen) Co., Ltd.
IWAKI Singapore Pte Ltd.
IWAKI Singapore Pte Ltd.
IWAKI SDN. BHD.
IWAKI Korea Co., Ltd.
IWAKI Pumps Taiwan Co., Ltd.
IWAKI (Thailand) Co., Ltd.
IWAKI Pumps Australia Pty Ltd.

TEL: (1)508 429 1440
TEL: (55)19 3244 5900
TEL: (86)21 6272 7502
TEL: (852)2607 1168
TEL: (86)20 84350603
TEL: (86)0755 8656 3696
TEL: (65)6316 2028
TEL: (62)21 6906606
TEL: (60)3 7803 8807
TEL: (82)2 6238 4800
TEL: (886)2 8227 6900
TEL: (66)2 322 2471
TEL: (61)2 9899 2411

FAX: (1)508 429 1386
FAX: (55)19 3244 5900
FAX: (86)21 6272 6929
FAX: (852)2607 1000
FAX: (86)20 84359181
FAX: (65)6316 3221
FAX: (62)21 6906612
FAX: (60)3 7803 4800
FAX: (82)2 6238 4801
FAX: (886)2 8227 6818
FAX: (66)2 322 2477
FAX: (61)2 9899 2421

() Country codes

Caution for safety use:
Before use of pump, read instruction manual carefully to use the product correctly. Actual pumps may differ from the photos. Specifications and dimensions are subject to change without prior notice. For further details please contact us.

Legal attention related to export.

Our products and/or parts of products fall in the category of goods contained in control list of international regime for export control. Please be reminded that export license could be required when products are exported due to export control regulations of countries.

The posting and copying from this catalogue without permission is not accepted firmly.